


Installation and operating instructions for Roller Blinds

General information

Please read the following installation and operating instructions carefully. We are unable to accept responsibility for products that have not been installed or operated correctly.

The roller blinds comes with the following components :

- 1 set of steel mounting brackets with plastic covers (Type 10, standard).
- Mounting profile with clips (type 20)
- Mounting profile with decorative cassette (type 30), either
- with clips for wall mounting or brackets for ceiling mounting.
- 1 set of mounting screws (all types).

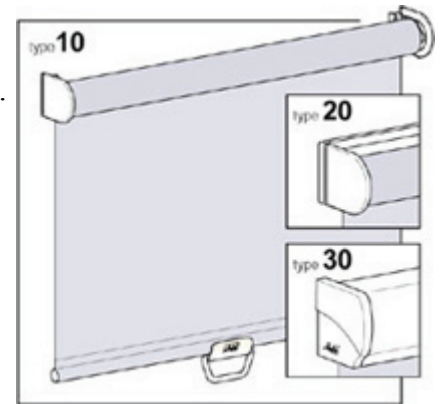


STANDARD INSTALLATION

Make sure that the position of the brackets is such that the roller blind does not come into contact with protruding parts, such as window- or doorhandles, window- sills etc.


Installation of standard brackets (Type 10)

The brackets can be used for: wall mounting (1a), ceiling mounting (also suitable for inclined ceilings) (1b) or fixing to the side, in the recess of the window (1c). The same bracket can be used for LH and RH mounting.

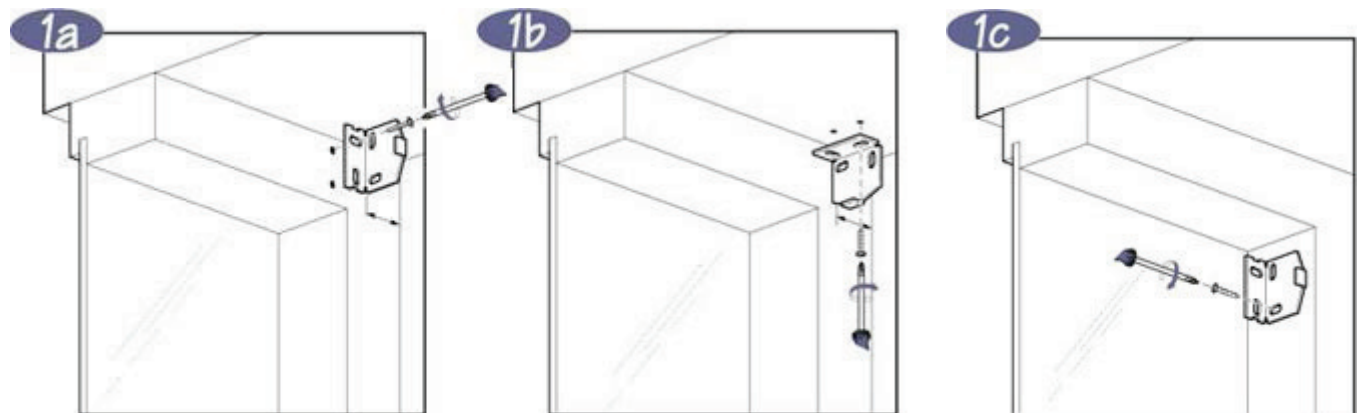

1d. Mark the position of the first bracket, mark, drill holes and fix the bracket in place. It is recommended to insert the bracket cover over the bracket before marking the position of the bracket.

Insert one side of the roller in the mounted bracket. Then place the other bracket on the other end of the blind and mark its' position. (The blind should have 2 mm of play between the brackets and roller.) Make sure that the second bracket is marked so that it is level with the first, drill the holes and fix the bracket in place.

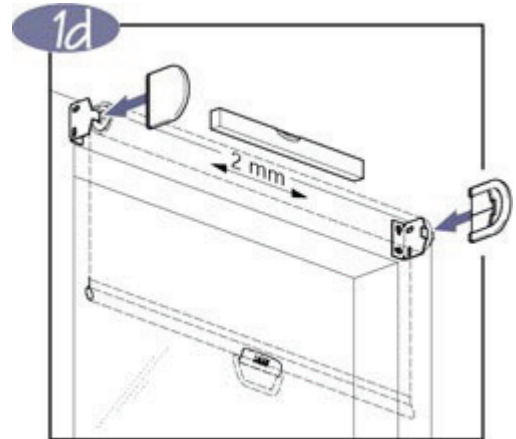

Installing the roller blind

NB: It is easier to install the blind into the brackets while the plastic bracket covers are removed.

2. Chain/Endless cord

2a. Insert the control side of the blind in the bracket. The control side has a star-shaped hole, which makes it possible to mount the blind in different angles.

NB: Make sure that the chain/endless cord hangs straight downward.




2b. Bring the bearing end of the blind to the lip of the bracket. Align the slot on the bearing with edge of the bracket.

Gently push the bearing into the bracket until a 'click' is heard. This can be done either from the top or under side.




2c. Insert the plastic covers over the mounting brackets.

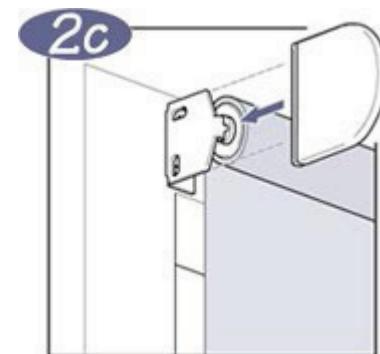

"Soft-raise" spring operation

3a. Insert the cross-shaped opening of the spring, on the LH side of the blind in the bracket (the orientation of the cross is unimportant)

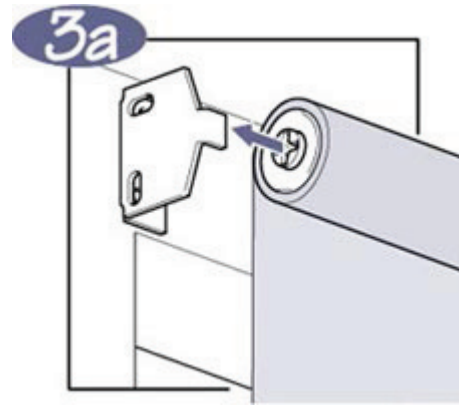

3b. Bring the bearing end of the blind to the lip of the bracket. Align the slot on the bearing with edge of the bracket. Gently push the bearing into the bracket until a 'click' is heard. This can be done either from the top or under side.



3c. Insert the plastic covers over the mounting brackets.

